

ym
*RDP60a.*I N S T R U C T I O N S

GENERAL:

This beacon operates in the same manner as any standard commercial coleman lantern. Care and servicing of the unit may be performed as suggested by commercial manufacturers.

SPECIFIC:

1. If the mantle is damaged secure, attached and burn off a new one which should be procurable in most camping or sports stores.
2. Fuel only with unleaded petrol through black removable cap on tank.
3. When fueled with approximately one pint of petrol, 20 strokes of the pump should be adequate. The pump (black valve on tank) is unlocked by counterclockwise rotation, operated and relocked in the opposing direction before lighting off. One pint of fuel should permit about 8 hours operation.
4. To light, turn red valve $1/4$ turn left, insert lighted match into globe through port in lower side of globe. (Note: Some models are equipped with flint strikers which are operated by a quick clockwise twist.) When the light steadies (continuous smooth audible hiss of fuel), open red knob fully to left.
5. To extinguish, close red valve to right. Lamp will extinguish in 20 or 30 seconds.
6. If light seems to drop in intensity, check pressure level by pumping a few strokes.
7. If lamp fails to operate, clean jet to mantle. (Note: Some models are equipped with a line cleaner; operate by pushing in and rotating in both directions.)

The globe is removed by loosening and in some cases removing two knurled nuts, one on either side of the lower edge of the globe.

Sent to *as per*
 request.
yes 9/10/53

STAT

STAT